


## CONTENTS

<b>1</b>	<b>PACKAGE CONTENTS</b> .....	<b>5</b>
<b>2</b>	<b>NAME OF EACH SECTION</b> .....	<b>6</b>
<b>3</b>	<b>LOADNG THE STAPLE CARTRIDGE</b> .....	<b>7</b>
<b>4</b>	<b>STAPLING AUTOMATICALLY</b> .....	<b>9</b>
<b>5</b>	<b>STAPLING MANUALLY</b> .....	<b>10</b>
<b>6</b>	<b>STAPLING ON THE CORNER</b> .....	<b>11</b>
<b>7</b>	<b>REPLACING THE STAPLE CARTRIDGE</b> .....	<b>12</b>
<b>8</b>	<b>CLEARING JAMMED STAPLES</b> .....	<b>14</b>
<b>9</b>	<b>SPECIFICATIONS</b> .....	<b>15</b>

## **1** PACKAGE CONTENTS


MAX

EH-70F(1pc)

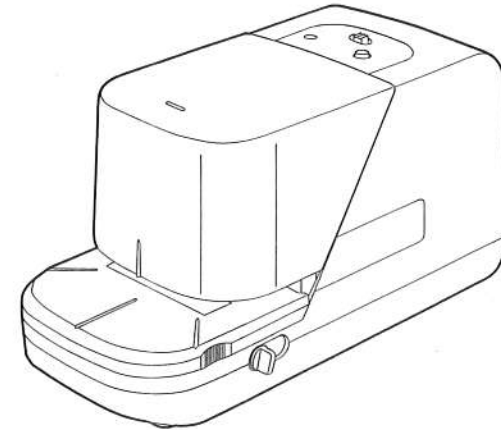


Instruction manual(1pc) AC adopter(1pc)

No.70FE Staple cartridge(1pc)

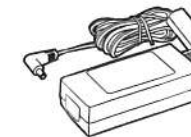


Power cord (1pc)

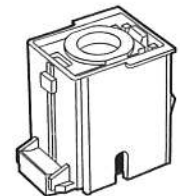

(This cord is for USA model.  
The plug is different depends  
on each model.)


## 2 NAME OF EACH SECTION

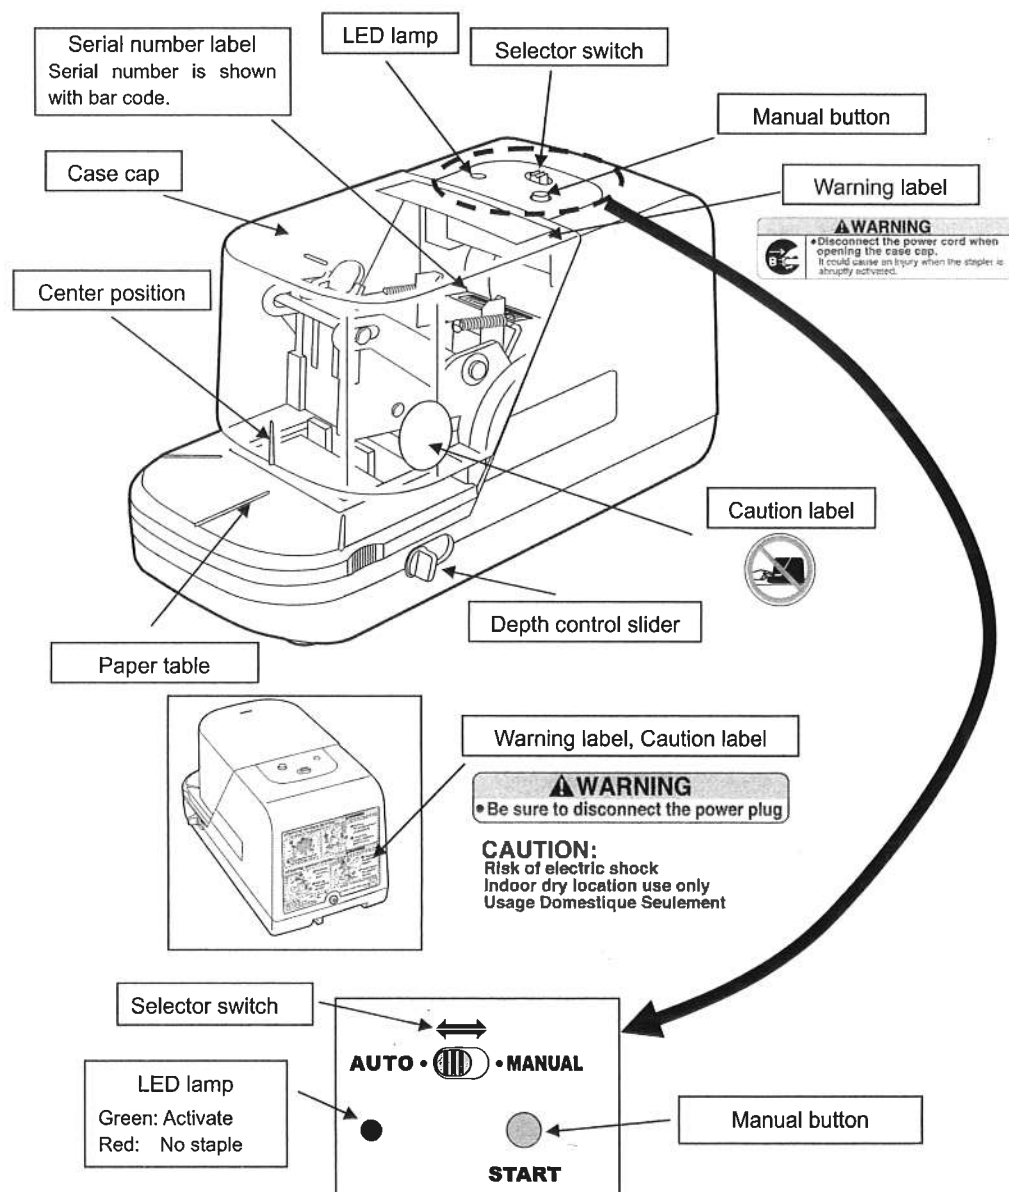


## 3 LOADNG THE STAPLE CARTRIDGE

Prior to loading the staple cartridge into the machine, prepare and check it.

- (1) As shown in the figure, pull the stopper attached below the staple cartridge in the arrow direction to remove it.

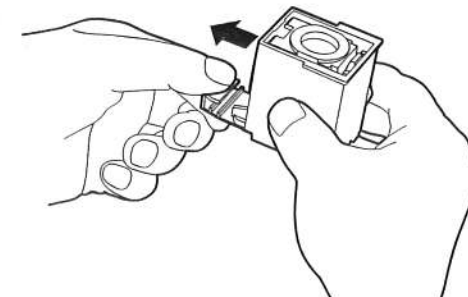

- (2) If a staple sheet is come out of the cartridge, push it into the cartridge. It could cause a jammed staple.

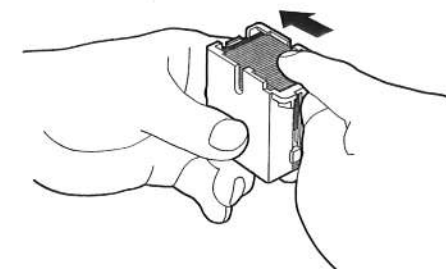

### **WARNING**




Disconnect the power cord when loading the staple cartridge or clearing jammed staples. It could cause an injury when the stapler is abruptly activated.

Disconnect the power cord from a plug socket.


- (1) Open the case cap.



- (2) Load the staple cartridge in the arrow direction.

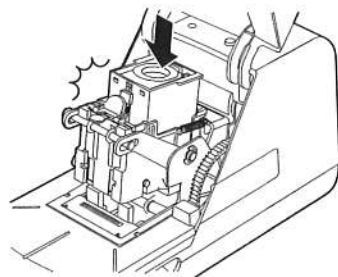

- (3) Close the case cap.

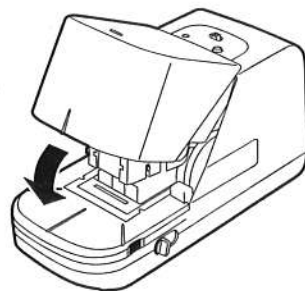

- (4) Connect the power cord to the plug socket.

#### 4 STAPLING AUTOMATICALLY

##### ⚠ WARNING





Never touch the white-colored switch. It could cause an injury when the stapler is abruptly activated.


- (1) Slide the selector switch to the "Auto," which is located on top of the main body.



- (2) Stapling depth is adjustable within a range of approx. 6 to 18 mm (1/4" to 3/4") for parallel stapling. Loosen the depth control knob and move it back and forth to adjust to your desired depth.

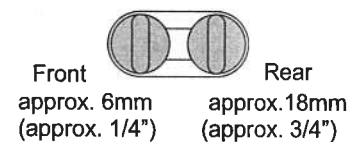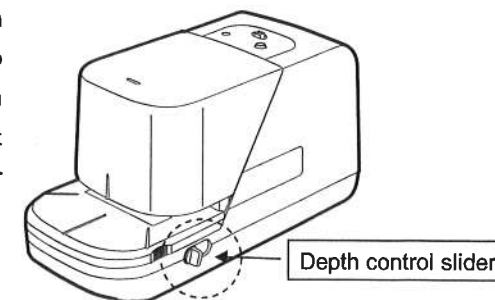

- (3) The mark on the front of the machine is the center of the horizontal stapling position. Move the paper to the right and left to set your desired position.

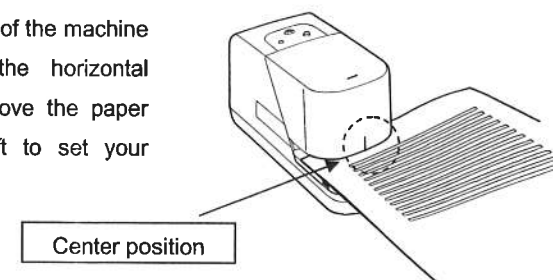

## 7 REPLACING THE STAPLE CARTRIDGE (No. 70FE)



If the staples run out in the cartridge, the LED lamp on top of the machine will be illuminated in red in order to inform of replacement of cartridge. In this case, the paper cannot be stapled, even if it is inserted. Replace the cartridge as instructed below.

### ⚠ WARNING




Disconnect the power cord when loading the staple cartridge. It could cause an injury when the stapler is abruptly activated.

(1) Disconnect the power cord from a plug socket.

(2) Open the case cap.



(3) Hold the cartridge and pull it upward to detach it.

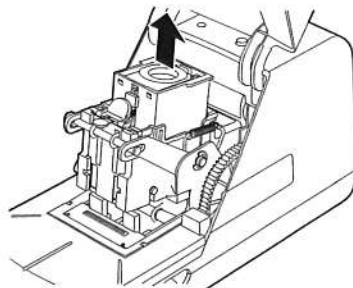


(4) Load a new cartridge.



If you have removed the cartridge before it runs out of the staples, the following condition may occur in the cartridge. Seeing the following, load the cartridge again.

(1) The staple sheet is exposed from the cartridge.

In this case, push the staple sheet into the cartridge.

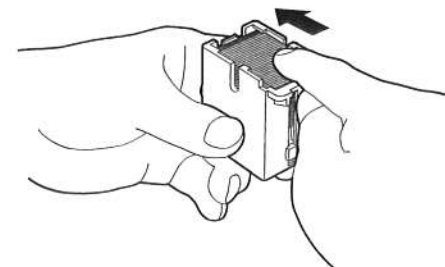

### REQUEST

1. Use MAX genuine staple cartridge "No.70FE."
2. Do not set the broken and shortened staples into the cartridge or load them into the machine to reuse them. They could cause a trouble or staple jam.
3. Do not touch the staple sensor or feeding roller of staple when removing staples from the machine.

## 8 CLEARING JAMMED STAPLES

If the staples jam, eliminate them as follows:

### ⚠ WARNING




Disconnect the power cord when clearing jammed staples. It could cause an injury when the stapler is abruptly activated.

(1) Disconnect the power cord from a plug socket.


(2) Open the case cap.



(3) Hold the cartridge and pull it upward to detach it.

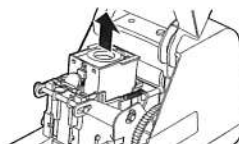


(4) Pushing inside the green lever located on the front of the main body, pull up the opener handle.

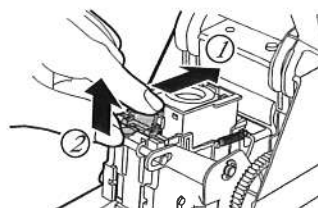

(5) Remove the jamming staples.

And then, push down the opener handle to its original position.

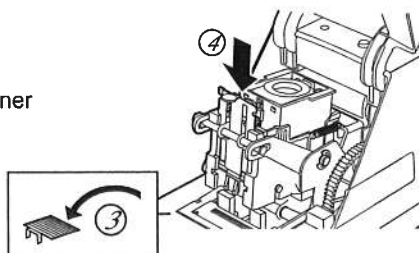

## 9 SPECIFICATIONS

Model name	MAX Electronic Stapler EH-70F
Capacity	2 – 70 sheets (64gsm, 55kg / 16-lb.bond paper)
Stapling speed	2 staples per second
Stapling system	Motor driven link mechanism with automatic feed
Throat depth	Auto stapling: Adjustable approx. 6 to 18 mm (1/4" to 3/4") Manual stapling: Adjustable approx. 3 to 18 mm (1/8" to 3/4")
Dimensions	100mm (4") (W) x 112mm (4-1/2") (H) x 210mm (8-1/4") (L)
Weight	1.2Kg (2.7 lbs)
Power consumption	Approx. 13W
Power source	DC24V, 2.08A Use only specified AC adapter (AC100-240V, 50-60 Hz) appended to machine.
Working Temp. and Humidity ranges	5°C/41°F – 35°C/95°F, Below 80% RH (non-condensation)
Staple cartridge	MAX No.70FE staple cartridge Contains a guaranteed minimum of 5,000 staples.

### REQUEST

1. Stapling capacity depends on the kind of paper. The machine might not staple up to 70 sheets in the other kind of paper. In this case, do not staple it forcibly.
2. In case of stapling continually for a long time, the machine might not staple because the motor would be very hot. In this case, stop operating for 30 minutes or more to cool motor. And then, start to operate again.
3. Operate less than 70 sheets (55kg / 16-lb.bond paper). It could cause damage the machine when operating the machine over the specification.
4. Contact your dealer or distributor with telephone or e-mail if machine would be out of order or you have any problem.